


NUURA

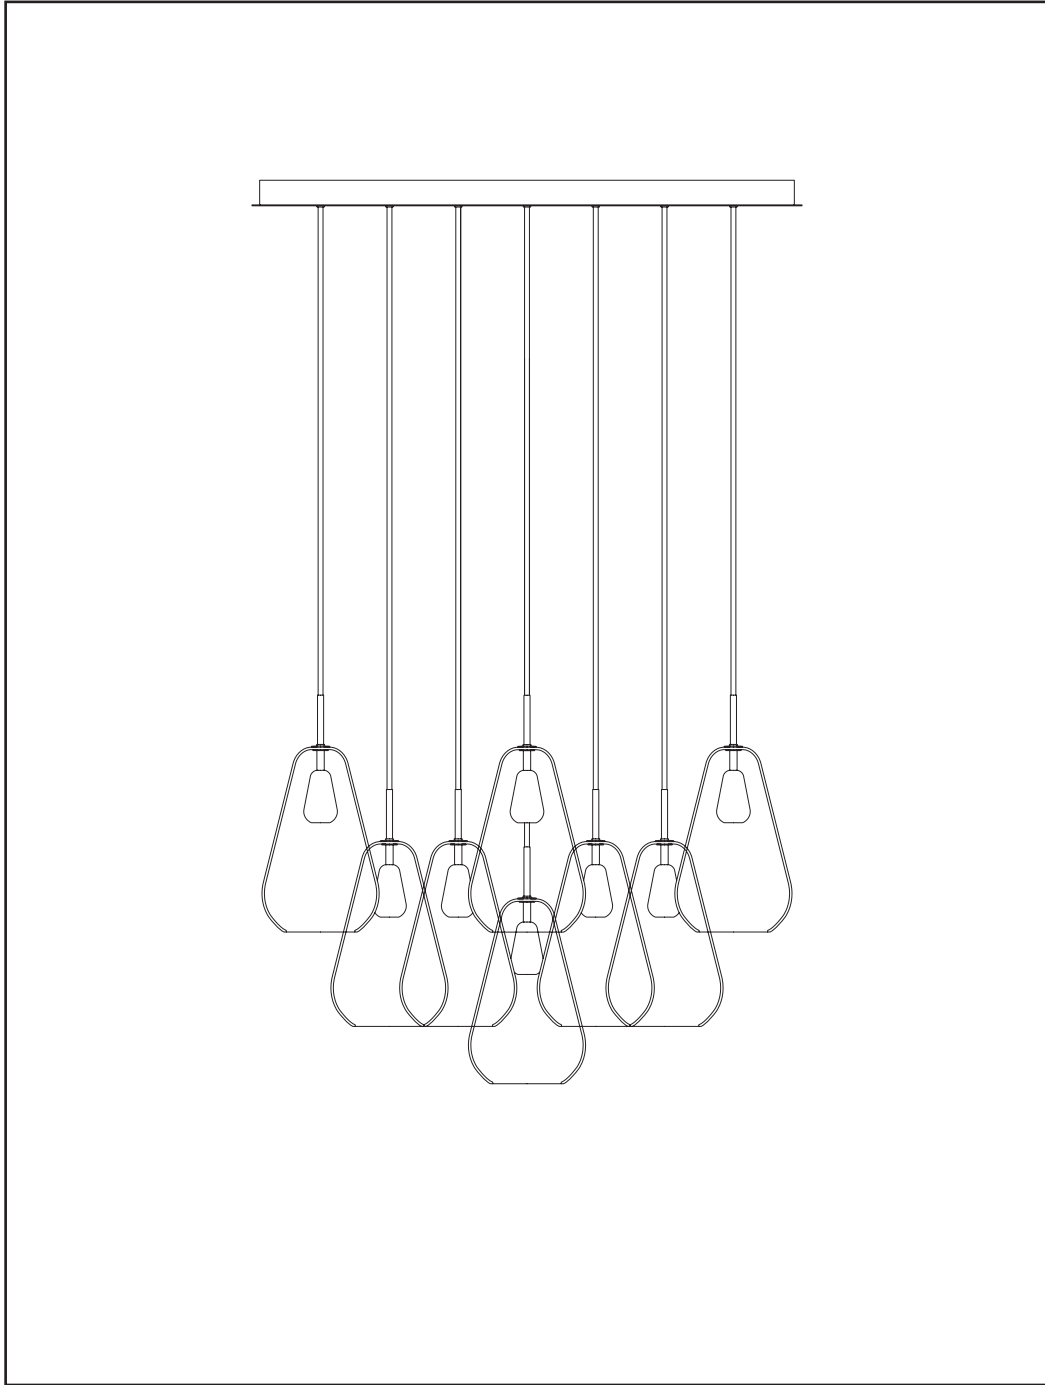



ANOLI CHANDELIER FORMATIONS

ANOLI 3


Short random pendant formation

Instruction: To adjust the cables in short random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 235cm / 92,5 in
- 3: 220cm / 86,6 in

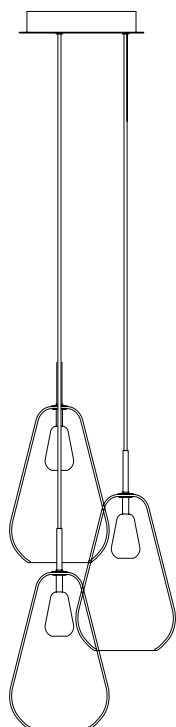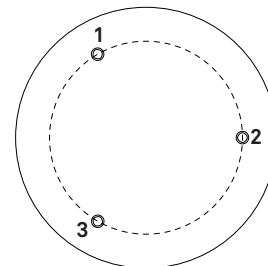

Lead the wires in through the holes starting with nr. 1.
Place clockwise.



All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.



NB. Cut off the same length of each cable for keeping the formation!

ANOLI 3


Long random pendant formation

Instruction: To adjust the cables in long random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 235cm / 92,5 in
- 3: 220cm / 86,6 in

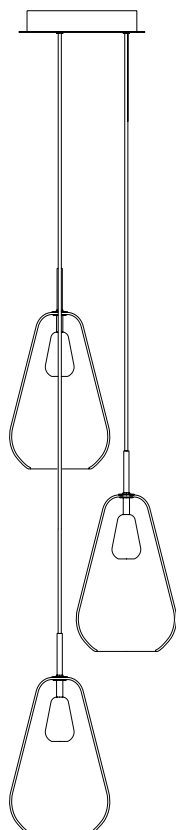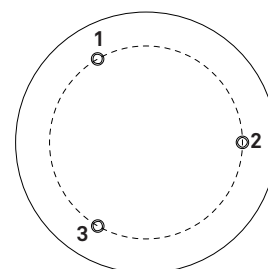


Lead the wires in through the holes starting with nr.1.
Place clockwise.



All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

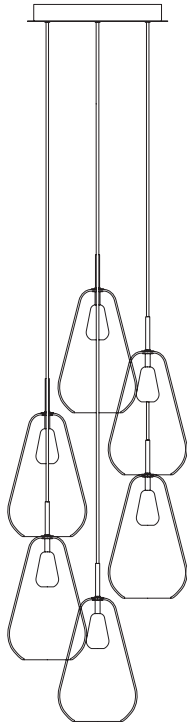


ANOLI 6


Short random pendant formation

Instruction: To adjust the cables in short random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 205cm / 80,7 in
- 3: 235cm / 92,5 in
- 4: 190cm / 74,8 in
- 5: 220cm / 86,6 in
- 6: 175cm / 68,9 in

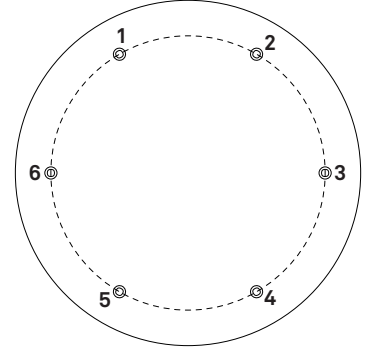


Lead the wires in through the holes starting with nr. 1.
Place clockwise.

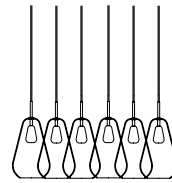

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

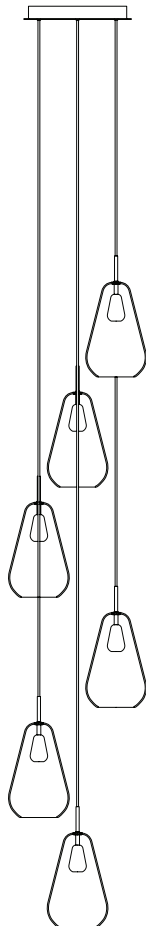


ANOLI 6


Long random pendant formation

Instruction: To adjust the cables in long random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 130cm / 51,2 in
- 3: 210cm / 82,7 in
- 4: 90cm / 35,4 in
- 5: 170cm / 66,9 in
- 6: 50cm / 19,7 in

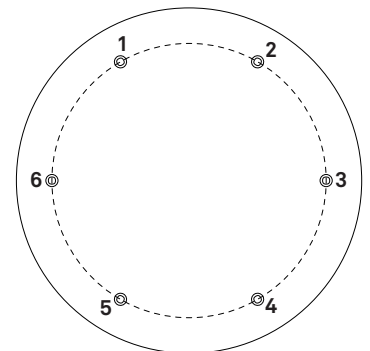


Lead the wires in through the holes starting with nr.1.
Place clockwise.

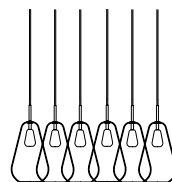

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

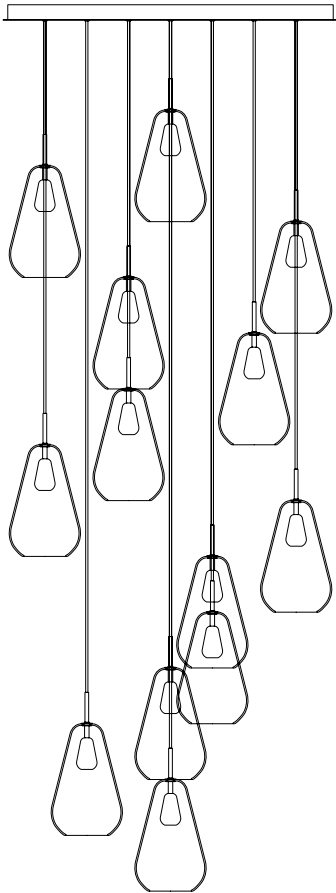


ANOLI 13


Random formation

To adjust the cables in Random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 175cm / 68,9 in
- 3: 100cm / 39,4 in
- 4: 220cm / 86,6 in
- 5: 160cm / 63,0 in
- 6: 85cm / 33,5 in
- 7: 145cm / 57,1 in
- 8: 205cm / 80,7 in
- 9: 130cm / 51,2 in
- 10: 190cm / 74,8 in
- 11: 115cm / 45,3 in
- 12: 235cm / 92,5 in
- 13: 70cm / 27,6 in

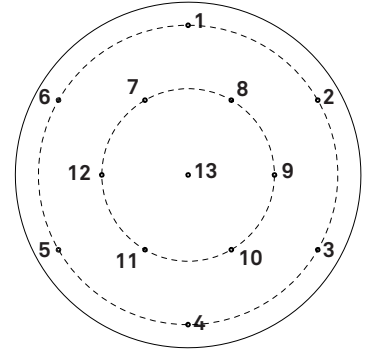


Lead the wires in through the holes starting with nr. 1.
Place clockwise.

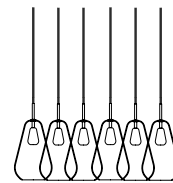

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

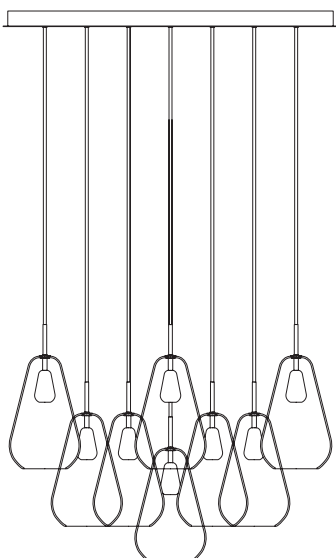


ANOLI 13


Curve formation

To adjust the cables in Curve formation, please cut the cables in the following lengths:

- 1: 225cm / 88,6 in
- 2: 225cm / 88,6 in
- 3: 225cm / 88,6 in
- 4: 225cm / 88,6 in
- 5: 225cm / 88,6 in
- 6: 225cm / 88,6 in
- 7: 240cm / 94,5 in
- 8: 240cm / 94,5 in
- 9: 240cm / 94,5 in
- 10: 240cm / 94,5 in
- 11: 240cm / 94,5 in
- 12: 240cm / 94,5 in
- 13: 250cm / 98,4 in

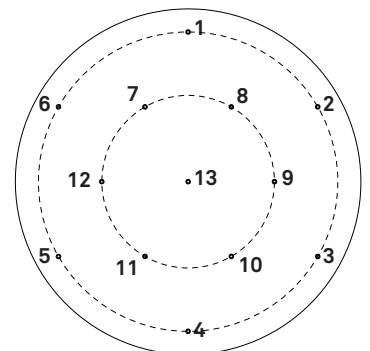

Lead the wires in through the holes starting with nr.1.
Place clockwise.

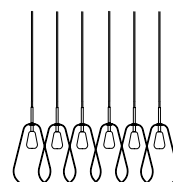

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!