


NUURA

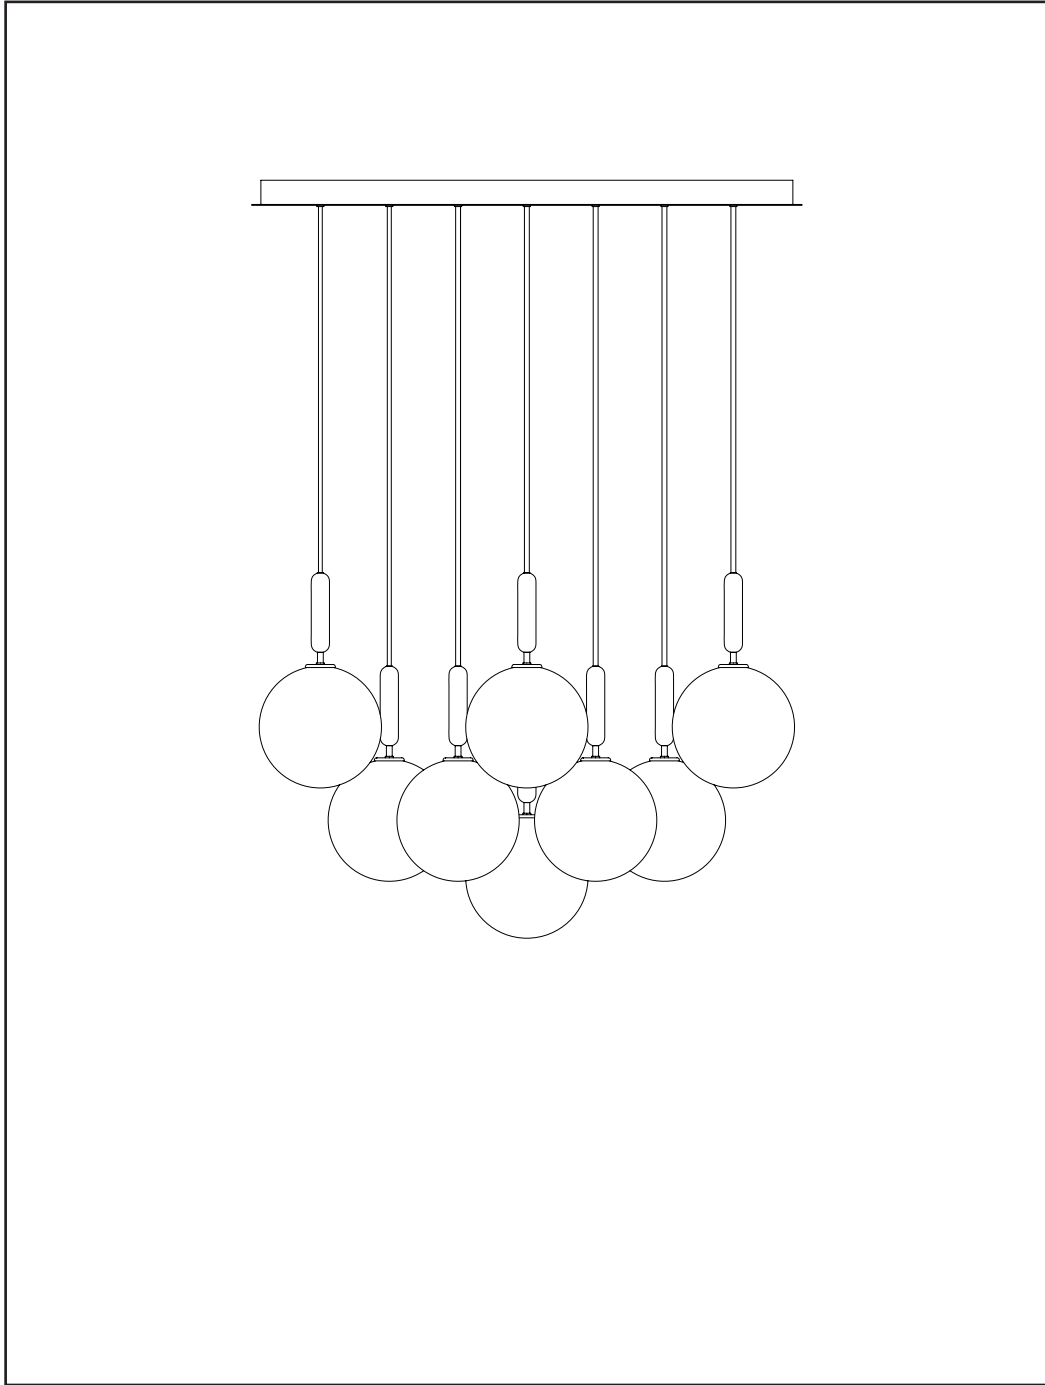


MIIRA CHANDELIER FORMATIONS

MIIRA 6


Short random pendant formation

Instruction: To adjust the cables in short random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 205cm / 80,7 in
- 3: 235cm / 92,5 in
- 4: 190cm / 74,8 in
- 5: 220cm / 86,6 in
- 6: 175cm / 68,9 in

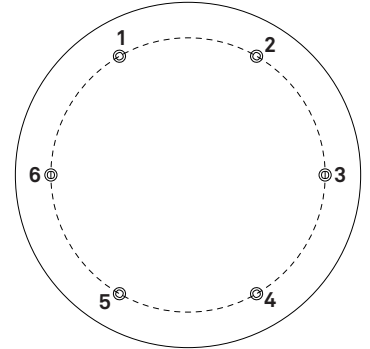


Lead the wires in through the holes starting with nr. 1.
Place clockwise.

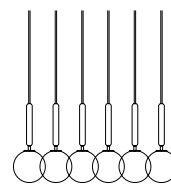

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

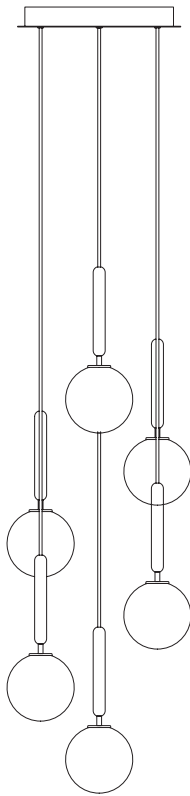


MIIRA 6


Long random pendant formation

Instruction: To adjust the cables in long random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 130cm / 51,2 in
- 3: 210cm / 82,7 in
- 4: 90cm / 35,4 in
- 5: 170cm / 66,9 in
- 6: 50cm / 19,7 in

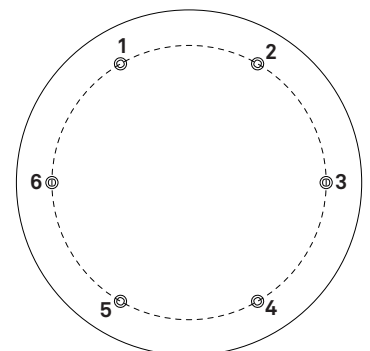


Lead the wires in through the holes starting with nr.1.
Place clockwise.

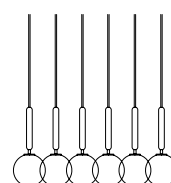


All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

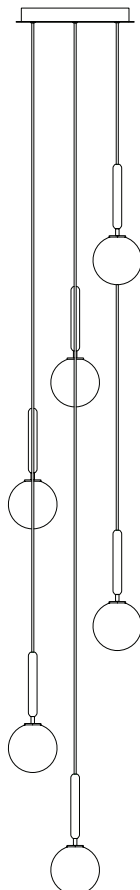

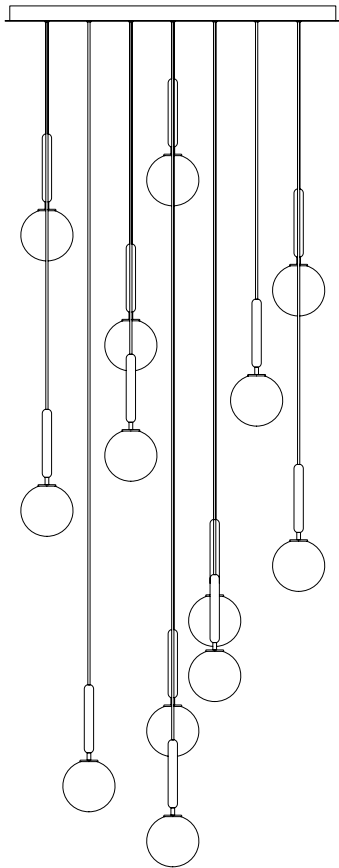


MIIRA 13


Random formation

Instruction: To adjust the cables in random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 175cm / 68,9 in
- 3: 100cm / 39,4 in
- 4: 220cm / 86,6 in
- 5: 160cm / 63,0 in
- 6: 85cm / 33,5 in
- 7: 145cm / 57,1 in
- 8: 205cm / 80,7 in
- 9: 130cm / 51,2 in
- 10: 190cm / 74,8 in
- 11: 115cm / 45,3 in
- 12: 235cm / 92,5 in
- 13: 70cm / 27,6 in

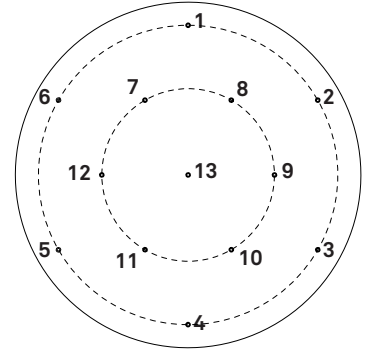

Lead the wires in through the holes starting with nr. 1.
Place clockwise.

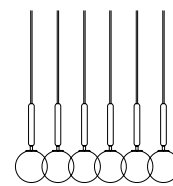

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.


NB. Cut off the same length of each cable for keeping the formation!

MIIRA 13



Curve formation

Instruction: To adjust the cables in curve formation, please cut the cables in the following length:

- 1: 225cm / 88,6 in
- 2: 225cm / 88,6 in
- 3: 225cm / 88,6 in
- 4: 225cm / 88,6 in
- 5: 225cm / 88,6 in
- 6: 225cm / 88,6 in
- 7: 240cm / 94,5 in
- 8: 240cm / 94,5 in
- 9: 240cm / 94,5 in
- 10: 240cm / 94,5 in
- 11: 240cm / 94,5 in
- 12: 240cm / 94,5 in
- 13: 250cm / 98,4 in

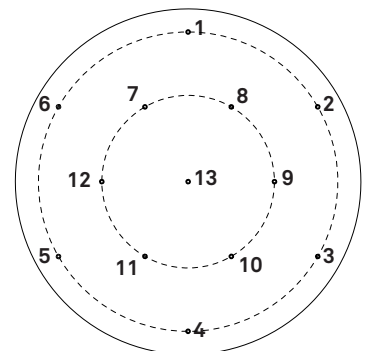

Lead the wires in through the holes starting with nr.1.
Place clockwise.

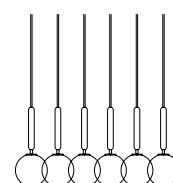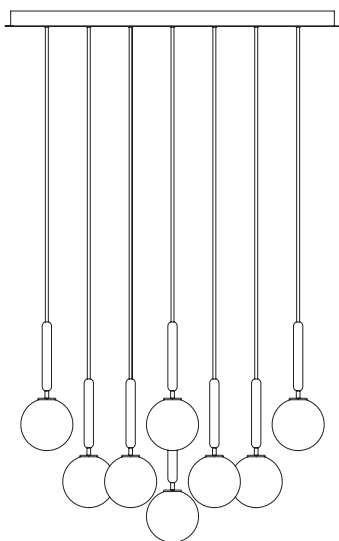

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.



NB. Cut off the same length of each cable for keeping the formation!

MIIRA 3 LARGE

Short random pendant formation

Instruction: To adjust the cables in short random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 232cm / 91,3 in
- 3: 214cm / 84,3 in

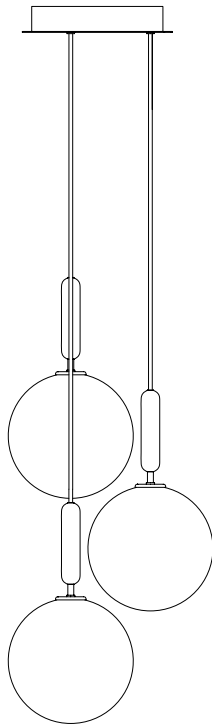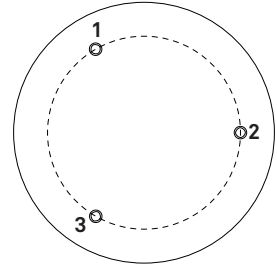

Lead the wires in through the holes starting with nr. 1.
Place clockwise.



All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.



NB. Cut off the same length of each cable for keeping the formation!

MIIRA 3 LARGE

Long random pendant formation

Instruction: To adjust the cables in long random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 235cm / 92,5 in
- 3: 220cm / 86,6 in

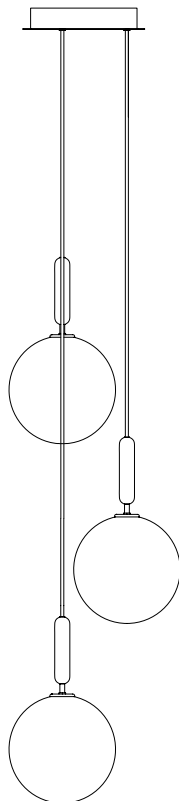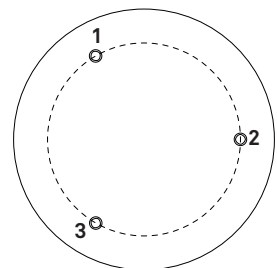

Lead the wires in through the holes starting with nr.1.
Place clockwise.




All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!


MIIRA 6 LARGE

Short random pendant formation

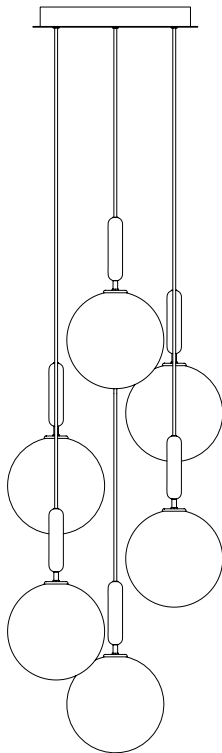


Instruction: To adjust the cables in short random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 205cm / 80,7 in
- 3: 235cm / 92,5 in
- 4: 190cm / 74,8 in
- 5: 220cm / 86,6 in
- 6: 175cm / 68,9 in

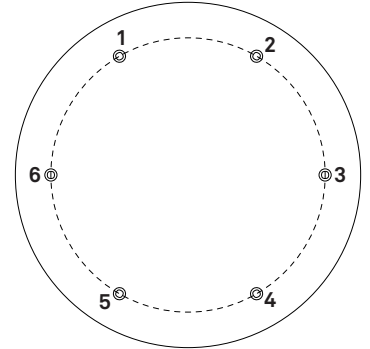

Lead the wires in through the holes starting with nr. 1.
Place clockwise.

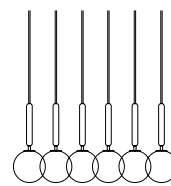


All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!


MIIRA 6 LARGE

Long random pendant formation

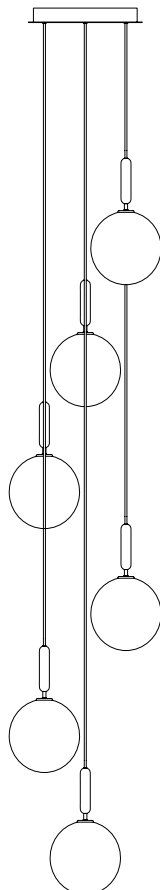


Instruction: To adjust the cables in long random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 145cm / 57,1 in
- 3: 215cm / 84,6 in
- 4: 110cm / 43,3 in
- 5: 180cm / 70,9 in
- 6: 75cm / 29,5 in

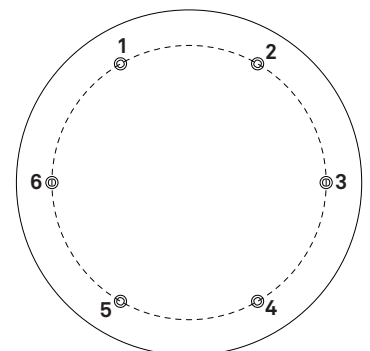


Lead the wires in through the holes starting with nr.1.
Place clockwise.

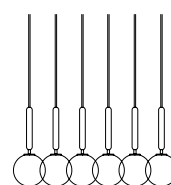

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!

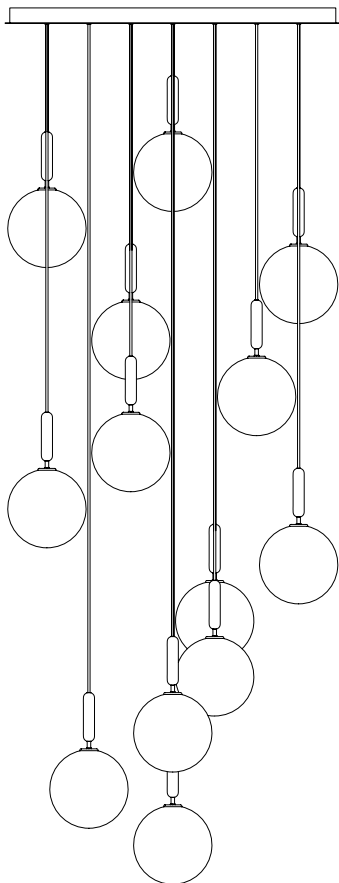


MIIRA 13 LARGE


Random formation

Instruction: To adjust the cables in random formation, please cut the cables in the following lengths:

- 1: 250cm / 98,4 in
- 2: 175cm / 68,9 in
- 3: 100cm / 39,4 in
- 4: 220cm / 86,6 in
- 5: 160cm / 63,0 in
- 6: 85cm / 33,5 in
- 7: 145cm / 57,1 in
- 8: 205cm / 80,7 in
- 9: 130cm / 51,2 in
- 10: 190cm / 74,8 in
- 11: 115cm / 45,3 in
- 12: 235cm / 92,5 in
- 13: 70cm / 27,6 in

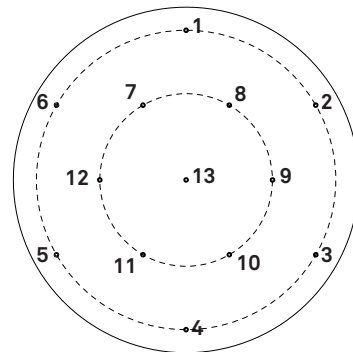

Lead the wires in through the holes starting with nr. 1.
Place clockwise.

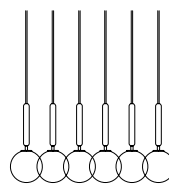

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.



NB. Cut off the same length of each cable for keeping the formation!

MIIRA 13 LARGE


Curve formation

Instruction: To adjust the cables in curve formation, please cut the cables in the following length:

- 1: 230cm / 90,5 in
- 2: 230cm / 90,5 in
- 3: 230cm / 90,5 in
- 4: 230cm / 90,5 in
- 5: 230cm / 90,5 in
- 6: 230cm / 90,5 in
- 7: 240cm / 94,5 in
- 8: 240cm / 94,5 in
- 9: 240cm / 94,5 in
- 10: 240cm / 94,5 in
- 11: 240cm / 94,5 in
- 12: 240cm / 94,5 in
- 13: 250cm / 98,4 in

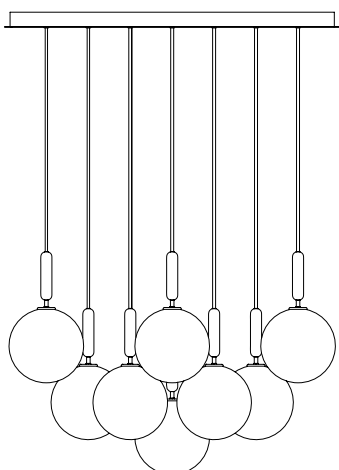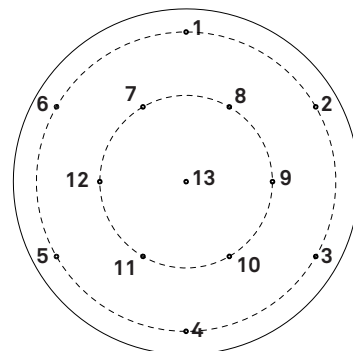

Lead the wires in through the holes starting with nr.1.
Place clockwise.

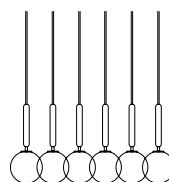

All standard cables are the same length:
250cm / 98,4 in.

If desired, adjust the length of the cables by shortening them.

NB. Cut off the same length of each cable for keeping the formation!